
RT362 Rotary Temperature Transmitter (852-100)

The RT362 is a two-channel temperature measurement system designed to monitor temperature on heated godet roll shells. The system features Dienescompatible output signals for temperature control on SwissTex (Rieter) machines. Error detection modes protect the heater from damage and expedite troubleshooting in the event of a sensor or other failure. Digital circuitry from sensor input to signal output and generous clearance between the rotating and stationary components make the RT362 a robust and reliable element in the temperature feedback loop.




Installation

- 1. Remove existing transmitter system from motor.
- 2. Attach RT362 Stator to motor housing using existing fasteners through mounting holes in stamped plate.
- 3. Slide RT362 Rotor on to shaft so that the connector mates securely with the RTD connector.
- 4. Verify Rotor-Stator spacing (5 mm nominal).
- 5. Tighten the two screws in the rotating base securely and evenly (alternate between them frequently).
- 6. Complete motor assembly.
- 7. Connect the cable from the machine controller to the 3-pin connector on the Stator.

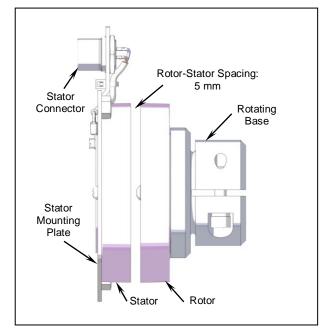

Installation Diagram

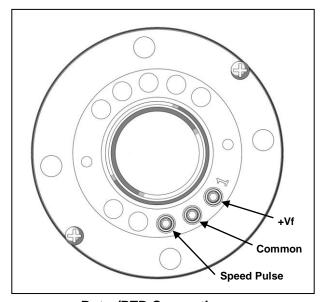

Rotor/RTD Connections

RT362 Rotary Temperature Transmitter (852-100)

Error Codes

Frequency Output	Displayed Output	Error Description
809.17	350° C	RTD Low : RTD is measuring less than 100 ohms (0° C for PT100) or is shorted. Output specific to zone in error.
820.86	360° C	RTD High : RTD is measuring more than 221 ohms (325°C for PT100) or is disconnected. Output specific to zone in error.
867.04	400° C	Internal Reference Resistor Low: Error in the Rotor circuit. Output common to all zones.
878.45	410° C	Internal Reference Resistor High : Error in the Rotor circuit. Output common to all zones.

Specifications

*Denotes preliminary specifications

Rotor: Number of sensors: 2

Sensor connection: Connector, Fischer PN: D 102 A021

Input sensor type: PT100 RTD (100 ohm at 0° C, alpha = .00385)

Sensor range: 0-300° C Speed: 10,000 RPM

Stator: Output connection: Connector, Fischer PN: DB-104 2040-80

Output signals: Frequency signal as current pulses on the power supply

(Dienes curve: 362.48 - 749.86 Hz) Speed Pulse (2 pulses per revolution)

Power Input: 11 - 18 VDC @ 30 mA nominal, 50 mA output pulse

General: Accuracy (maximum error):*±0.10% FS over 25-50° C ambient temperature range for 50-250° C RTD

readings

±0.17% FS over 25-85° C ambient temperature range for 0-300° C RTD readings ±0.20% FS over 25-85° C ambient temperature range for 0-300° C RTD readings

±0.33% FS over operating temperature range for 0-300° C RTD readings

Max Temp Coefficient: ±50ppm/° C over operating temperature range for 0-300° C RTD readings

Operating Temperature: 0-100° C, non-condensing

This document is subject to change without prior notification.

Warranty

Binsfeld Engineering Inc. warrants this product to be free from defects for a period of two years from the date of delivery to the original purchaser and that its products will conform to specifications and standards published by Binsfeld Engineering Inc. Upon evaluation by Binsfeld Engineering Inc., any product found to be defective will be replaced or repaired at the sole discretion of Binsfeld Engineering Inc. Our warranty is limited to the foregoing. Binsfeld Engineering Inc. disclaims any warranty of merchantability or fitness for intended purpose.